


Getting Started

Description and location of parts

Front panel

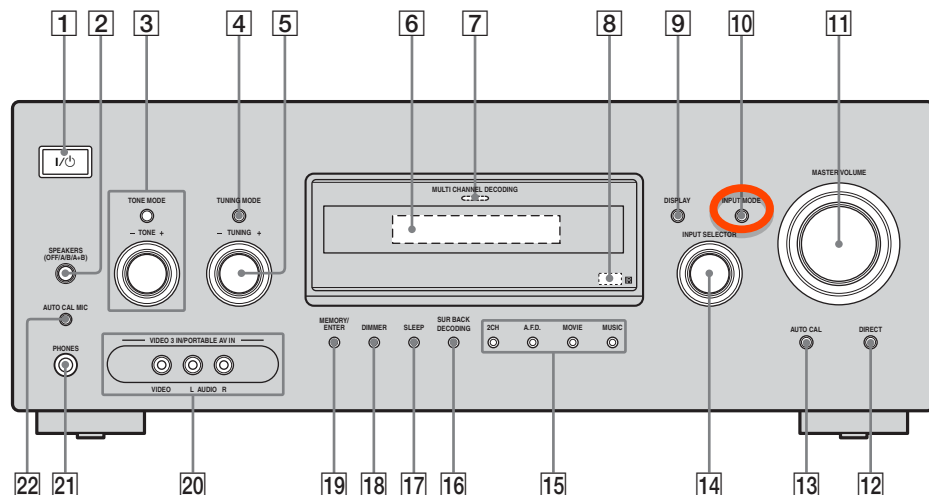

Name	Function
1 I/O (on/standby)	Press to turn the receiver on or off (page 32, 42, 43, 65).
2 SPEAKERS (OFF/A/B/A+B)	Press to select the speaker system (page 33).
3 TONE MODE TONE +/-	Adjusts the tonal quality (bass/treble level) of the front speakers. Press TONE MODE repeatedly to select bass or treble level, then turn TONE +/- to adjust the level (page 45).
4 TUNING MODE	Press to select the tuning mode (page 66, 68).
5 TUNING +/-	Turn to scan a station (page 66, 68).

Name	Function
6 Display	The current status of the selected component or a list of selectable items appears here (page 6).
7 MULTI CHANNEL DECODING lamp	Lights up when multi channel audio signals are decoded (page 43).
8 Remote sensor	Receives signals from remote commander.
9 DISPLAY	Press to select information displayed on the display (page 70, 76).
10 INPUT MODE	Press to select the input mode when the same components are connected to both digital and analog jacks (page 71).